Owner's Manual



Thank You for Purchasing a Split-fire Wood Chipper

We appreciate having you as our customer and wish you many years of safe and satisfactory operation with your machine,

SPLIT-FIRE SALES INC.

285633 Airport Road Norwich, ON NOJ 1P0

Canada

1-877-548-3473 / 519-468-3647

CONTENT

HOW TO USE YOUR OWNERS MANUAL								2
PROI	PRODUCT IDENTIFICATION							4
SAFE	TY							
	SAFETY LA	BLES			•	•		6
	OPERATION	N SAFE	TY		•		•	9
	WORKSITE	SAFE	ΓΥ		•	Ī	•	11
OPER	RATION AND	MAINT	ENAN	ICE				
	BEFORE OI	PERAT	ION	•			•	12
	OPERATION	٧	•		•		•	13
	STORAGE	•	•		•			13
WAR	RANTY.	•	•		•		•	14
PTO :	SHAFT.	•	•		•		•	15
GENE	ERAL PARTS	LIST					•	16
CHEC	CKLIST							18

HOW TO USE YOUR OPERATOR'S MANUAL

This owner's manual is a very important part of your new machine and should remain a permanent part of it. If the machine is sold, the operator's manual must go with it.

By reading the operator's manual you will help yourself and others avoid unnecessary personal injury and/or damage to the machine. The information recorded in this manual will help you use this machine safely and effectively. Once you know how to operate the machine correctly and safely, you can train others to operate the machine as well.

If your machine has been ordered with any options or attachments please refer to the individual operator's manual that is included with that individual accessory.

The machine that is used in this manual for illustration may differ slightly from your model. It will be similar enough to help you understand our instructions.

Throughout this manual the terms "Left Hand" and "Right Hand" and "front" and "back" will be used. These sides are determined by the infeed chute which is always the back of the Wood Chipper.

Your machine has been tested and inspected to ensure good performance prior to leaving the factory.

While reading the manual, important messages are used to bring the operator's attention where there may be safety concerns relating to machine damage and important servicing information. Please read all these messages to avoid

personal injury and machine damage. The three main messages will start with:

WARNING!!!: which suggests, a strong chance of personal injury or death to the operator or bystanders if procedures are ignored.

IMPORTANT: which suggests, a strong chance of potential damage to the machine may occur if procedures are ignored.


NOTE: suggests to the operator, General information given to help the operator to operate or service the machine.

PRODUCT IDENTIFICATION

If you ever need to contact your dealer or the manufacture for parts or questions regarding the operation or servicing of the machine, it is important to have the model number as well as all the necessary identification numbers. Using the sample pictures below you can find the necessary number to complete the spaces below.

Date of Purchase:		
Dealer Name:		
Dealer Phone Number:		
Frame Serial Number: (XX	XX XX)	

FRAME SERIAL NUMBER

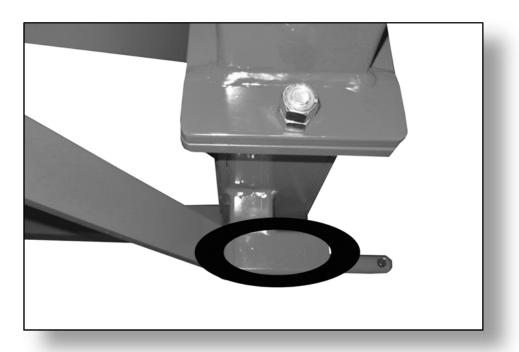

SAFETY LABELS

The machine safety labels shown in the section below are very important. They are placed in areas on the machine that draw the attention of the operator to potential safety hazards on the machine. If at any time the stickers are removed, or come off, contact your dealer or the manufacturer immediately for replacement decals.

The operator's manual explains the potential safety hazards in detail associated to each decal. Special attention should be kept for these recommendations. They are outlined for your safety.













OPERATOR TRAINING REQUIRED WARNING!!!

- ✓ Carefully read and understand all the instructions pertaining to the Wood Chipper in the operator's manual before operating your new machine. Anyone who operates or services this machine must read the owner's manual first. If any doubt or question arises about the safe and/or correct method of performing anything in this manual, contact one of our representatives at our head-office.
- ✓ Avoid accidents by being alert and recognizing potential hazards. Not all possible circumstances can be anticipated in this manual. Keep your Wood Chipper and work area safe for yourself and others. Proper care and safety is your responsibility.
- ✓ All operators must have the necessary training and skills to operate and the machine properly and safely. Use the controls correctly, and follow the safety signs and recommendations.
- X Never allow untrained persons to operate or service the equipment.
- X Never let persons under the age of 18 operate the Wood Chipper.
- ✓ The owner is responsible for accidents and injuries to themselves and/or other persons operating their machine. If others are permitted to use this machine it is the responsibility of the owner to train users.
- ✓ New users may operate this machine in a clear, unobstructed area under the supervision of an experienced operator, only after they have read and understand the owner's manual.

SAFE OPERATION

- \checkmark Only allow responsible adults who are familiar with the instructions to operate this machine.
- ✓ Inspect your machine each time before use. Special attention should be taken that all guards, safety devices and locking mechanisms are in place, damaged or missing parts are replaced, and that all the safety decals highlighted in the safety labels section are in place on the machine.
- ✓ Only one person may operate the machine at any time. More than one operator greatly increases the chance of personal injury or death.
- X Never leave machine unattended while running.
- Never operate machine when under the influence of alcohol or drugs.
- Do not alter; add accessories, or attachments to your Wood Chipper without the approval of the manufacturer. Doing any of the above without the manufacturer's approval will compromise the safety of the operator and WILL VOID THE WARRANTY. If attachments have been added with the approval of the manufacturer, be sure to keep safety labels visible.
- ✓ Your machine is designed to chip wood only! Stones, metal, gravel, and other foreign objects will cause damage to the machine and increase the chance of personal injury or death.

Worksite Safety

- ✓ Keep area around the Wood Chipper clear from tall grass, debris, tools, and pieces of wood at all times.
- ✓ Operate Wood Chipper on level surface only.



- Do not operate machine when distracted by others. Keep children and pets at least 25 feet away from the work area to protect them from possible injuries. Keep other distractions such as electronic devices away.
- ✓ Only use machine during daylight hours. Use of this machine without proper lighting can lead to personal injury or death.
- ➤ Protect yourself at all times while operating your machine.

 Safety glasses, steel-toed boots and ear protection should be worn at all times. Loose clothing is also not permitted around your machine.









- ✓ Keep hands and body parts clear of cutting blades.
- ➤ Do not transport this machine while the motor is running. This may cause permanent damage to your engine

BEFORE OPERATION AND MAINTENANCE

Pre-start Checklist

١٨	/ A		NΙ	Ш	ΝI		П	ı	ı	ı
V١	\prime	R	IN	Ш	IN	C	!	Ţ	!	Ţ

It is highly recommended to follow this procedure before each use of the Wood Chipper.

Inspect rotor, chipping, and mulching blades for cracks, wear, and
chipping blades to the rotor with a torque of 580 in./lbs
☐ Inspect rotor, intake and exhaust chutes for any obstructions.
Adjust deflector to desired position and height.
☐ Inspect PTO shaft and gear box for wear and damage.
☐ Check gear oil in gear box before every use.
☐ Make sure all pins and lock pins are secured in place.
☐ Make sure no persons or objects are in line with exhaust chute.
☐ Check that 3pt hitch is securely fastened to tractor.
☐ Grease PTO shaft every 16 hours.
☐ Grease Wood Chipper bearings every 50 hours.

OPERATION

Warm the tractor to operating temperature before chipping wood.

Make sure that you have read and understood all safety recommendations before operating the machine.

If any unnecessary noise occurs stop operation immediately and check for damage. If nothing can be seen bring it to a dealer to inspect. If there is no dealer in your area, contact Split-fire Sales Inc. to discuss the problem.

Take a break every couple hours. Continuous work can create extra stress which can lead to an accident.

STORAGE

Important! When storing your Wood Chipper special attention should be drawn to the areas listed below.

After each use make sure machine is clean and is free of wood chips around motor, intake chute and exhaust chute.

Grease machine and check oil level in gearbox after every 20 hours of use.

WARRANTY

Split-fire Sales Inc. guarantees the original purchaser of any new Split-fire machine, that the same is free of defects in workmanship or materials that may cause performance failure, subject to the conditions hereafter.

Split-fire must be contacted before the problem on the machine has been fixed. Split-fire will diagnose the problem and authorize any warranty work that will be allowed. If Split-fire does not authorize or parts are not sent from Split-fire Warranty will not be applicable.

This guarantee is limited to a period of one year from the date of purchase. Replacement of any defective part is free of charge FOB Split-fire sales Inc. If Split-fire requires the parts to be returned to Split-fire, Split-fire will pay for that shipping.


This guarantee does not apply to engines or other parts that are manufactured and guaranteed by the manufacture thereof, nor does this apply with respect to any part or product that:

- 1. has original parts removed or otherwise altered without specific authorization beforehand from Split-fire Sales Inc.
- 2. has had placed upon or attached to it any part or product not sold or approved by Split-fire Sales Inc.
- 3. has been damaged or is not used in conformity with the applicable instruction for the machine.
- 4. has not been properly adjusted, or maintained by the owner.
- 5. has been adjusted or altered to increase the performance of the machine.

This guarantee is in lieu of, and excludes all other guarantees and conditions of merchantability and fitness for a purpose. Acceptance of a Split-fire Sales product constitutes an agreement that Split-fire Sales shall have no liability for any special or consequential damage.


PTO Shaft


Please read the Comer Industries Regulations manual before using the PTO Shaft on your Wood Chipper.

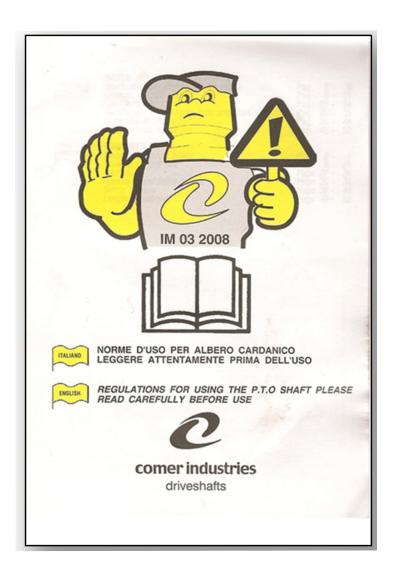

General Parts List

- 1. Locking Handle
- Chip Deflector
 Exhaust Chip Chute
 - 4. Decal Kit (12 pc)
- 5. Exhaust Chute Clamp Handle
 - Exhaust Chute Clamps
 Kickback Flaps (2 pc)
- 7. Nickback Flaps (z pc.) 8. Chipper Box Top Half 9. Chipper Box Bottom Half
 - Bed Blade Assembly
 1 to 3 Gear Box
 - 12. Gearbox Guard 13. PTO Shaft

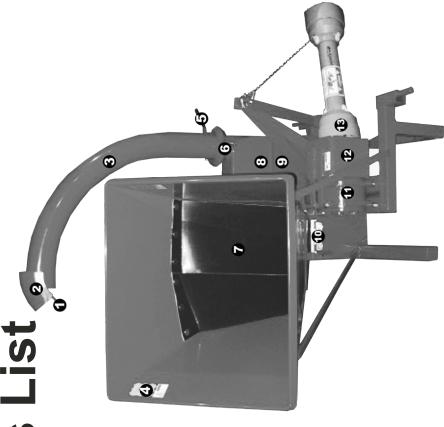

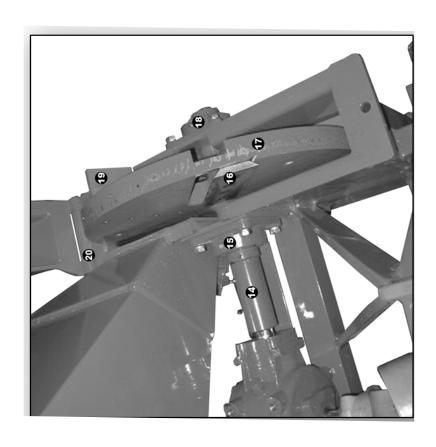

14. Coupling15. Bearing16. Blade (2-3 pc)17. Rotor18. Bearing19. Paddle (2-3 pc)20 Chipper box top half pin

Important: When repl

When replacing blades, coat the blade bolts with an Anti-Seize lubricant and torque the bolts to 35 ft-lb (foot-pounds). Do Not reuse bolts if they are damaged.

Machine Operator Safety Instructions

Equipment dealers selling or renting a Split-Fire wood chipper must ensure that each customer who is an end -user / operator of the machine must read and understand this checklist and the rest of the Owner's Manual by signing below and returning signed form to the dealer. Dealers are required to maintain signed forms for no less than 2 years.

- 1. Always wear ear, eye, hand, and foot protection when operating the Wood Chipper. Never wear loose clothing.
- 2. Before operating machine, check that all guards and deflectors, pins and locking pins are in place and are in good working condition, and all nuts and bolts are properly tightened.
- 3. Do not operate this equipment in the vicinity of bystanders. Do not allow children to operate this equipment. Make sure no persons or objects are in line with exhaust chute.
- 4. Do not transport this machine while it is running.
- 5. Body parts must never enter the in-feed or the exhaust chute. Use a Long Branch or stick to push in small material.
- 6. This machine is designed to chip wood and brush only! Stones, metal, gravel, and other foreign objects will cause damage to this machine and increase the possibility of personnel injury.
- 7. If the machine becomes clogged or before a routine inspection, shut off the tractor, and make sure the machine has come to a complete stop. Then cleaning and servicing can take place safely.
- 8. Keep the area around the equipment clear of any debris or large accumulations of material in order to have a solid footing and a sure balance.
- 9. Do not allow processed material to build up in the discharge area. This can cause a kickback.

- 10. When foreign materials of any type enter the chipper, or when the equipment starts to vibrate, it must be immediately shut off and inspected. Then replace, repair, or tighten any parts where needed.
- 11. Carbon monoxide can be extremely dangerous in enclosed areas. Do not run equipment in enclosed areas as the exhaust from the tractor contains carbon monoxide.
- 12. Failure to comply with these guidelines may cause serious injury or death.

Customer/Operator Sig	ınature: ˌ			
Date:	_/	/ 20		

I have read and fully understand all of the above.

